

品質表示

品名：耐熱ガラス製器具

使用区分：電子レンジ用

耐熱温度差：120℃

※耐熱温度差と耐熱温度は異なります。
耐熱温度差とは高温にしたガラスを水中に投入し急冷させたこと、破損に耐える温度差のことです。

取扱上の注意

- 直火、オーブン等で加熱・調理・空だきをしないで下さい。
 - 使用区分以外には使用しないで下さい。
 - 調理の際は外側の水滴をぬぐい、途中で差し水をする時は冷水の使用をさけ、またガラスの部分が熱くなっている時はぬれた布でふれたり、ぬれた所に置かないで下さい。
- ※耐熱ガラスは熱に強いガラスで、衝撃に強いガラスではありません。




原産国：タイ

http://www.iwaki-china.com.cn



(株)岩城/ハウスウェア
http://www.igcc.jp/

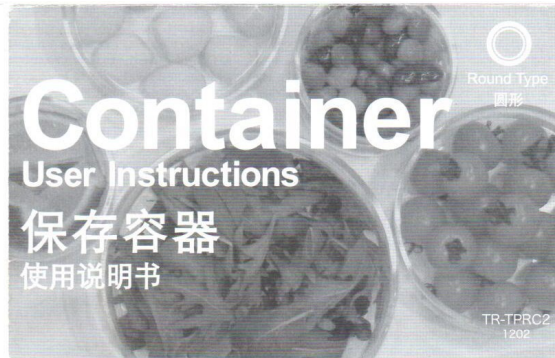

使用注意事項

如果不遵守注意事項，有造成灼傷、割傷的危險，方能安全地長期使用本產品，請一定遵守注意事項。

<玻璃產品使用注意事項>

●使用前請確認玻璃產品的邊緣是否有裂痕、缺口等。(為防止清洗時的刮傷) ●玻璃產品上如有裂痕、缺口、強度削弱，意想不到的會發生破損，請不要使用。

●玻璃製品是易碎品。在清洗、使用時一定要小心操作。

!注意：清洗時請使用柔軟的海綿加中性洗滌劑，請不要使用帶有研磨劑的肥皂、金屬放毒或粗粒去污粉等，它會造成玻璃產品的刮傷或破損。

●污痕難以清洗時，請使用廚房專用漂白劑等。●清洗時如用力刮擦玻璃容器邊緣並用力擦洗的話，會損壞玻璃造成意外。●請不要將湯勺等硬物使勁敲打、碰撞，它會造成刮傷、破損。

●玻璃製品破損時成為特殊的玻璃碎片。●請務必指導孩子玻璃製品的使用注意事項。●處置玻璃製品時，避免和可循環利用的玻璃瓶混放在一起。(因為玻璃成分不同)。

<加熱時的注意事項>

!注意：請不要在明火上加熱，以免造成破損或灼傷。●請不要在微波爐以外的加熱器具或電器上加熱，以免造成破損。●請注意不要過度加熱或空爐加熱，同時請注意加熱後玻璃容器溫度會升高。

●使用帶有旋轉功能的微波爐的自動調節加熱時，在使用前請確認微波爐的選項不是在旋轉功能上再加熱，容器蓋有熔化的危險。

<容器蓋使用注意事項>

!注意：移動或拿取玻璃容器時，請不要在容器蓋上，以免造成玻璃容器的脫落、掉落。●食物中的色素會附着在容器蓋上，同時，味道強烈的食品的味道會殘留在蓋上，使用時請注意。●蓋子不是完全密封式的，請不要將玻璃容器橫放保存。

<冷凍保存注意事項> ●含有食物的容器放入冷凍室保存時，由於食物被冷凍後體積增大，玻璃容器在壓力的作用下容易產生破損，操作時請注意如下事項正確使用

●不要冷凍液狀的食品。(如蛋液、清湯、湯汁、湯料、牛奶、飲料等) ●不要冷凍米飯、粥。(因為飯含有較多水分，冷凍後會產生超出想像以上的體積增大) ※但是冷凍米飯時，要先輕輕攪一下米飯，做成【飯團】狀，放在側面留有空間的玻璃容器里時方可冷凍。

<关于餐具清洗干燥機的使用注意事項>

●玻璃容器本體可以用于餐具清洗干燥機。

Not for use with open flame
Microwave-safe 微波爐用

● Allowable temperature change: 120°C

● 耐熱温度差: 120°C



取扱上の注意 (保存容器フタのまま電子レンジOK)

注意事項を守らないと火傷やケガの危険があります。安全に長くお使いいただくために必ず守り下さい。

<ガラス取扱い時の注意>

●ご使用前にガラスの縁にヒビ、カケ等がないか確認下さい。(洗浄時のケガ防止のため) ●ガラスにヒビ、カケ、強いスリ傷の入ったものは、思わぬ時に破損することがありますので使用しないで下さい。

●ガラスは割れやすいものです。洗浄やご使用に際しては、△注意：洗浄する場合は、やわらかいスポンジに中性洗剤をお使い下さい。研磨剤入りナイロンたわし、金庫たわしや粒子の粗いクレンザー等を使用しますとガラスが傷つき、破損する原因となるので使用しないで下さい。●汚れのひどい時は、台所用漂白剤等をお使い下さい。●力をいれて縁を持ち、ひねり洗いをする。破損して思わぬケガをすることがありますのでご注意ください。

●スプーン等固いもので強くたたいたり、ぶつけたりしないで下さい。傷がつき破損する原因となります。●ガラス製品は破損すると鋭利な破片となります。破片は充分注意してお取扱い下さい。

●お子様がご使用になる時は、取扱/注意内容をご指導下さい。●廃棄する時は、ガラスびんのリサイクルに混入しないで下さい。(ガラス成分が異なるため)

<加熱時の注意>

△注意：直火では加熱しないで下さい。破損や火傷の原因となります。●電子レンジ以外の加熱器具や暖房器具では加熱しないで下さい。破損の原因となります。●加熱しすぎや空だきをしないで下さい。また、加熱後はガラスが熱くなることがありますのでご注意ください。●オーブンレンジの自動メニューキーで加熱する時は、オープン機能が作動しないことを確認してお使い下さい。フタがとげる危険があります。●油分の多い食品のレンジ加熱時はフタを外して下さい。

<フタ取扱い時の注意>

△注意：持ち運ぶ時はフタを持たないで下さい。ガラスが抜け落ちます。●フタは食品の色素によって着色されることがあります。また、臭いの強い食品によって臭いの残ることがありますのでご注意ください。

●フタは完全密閉式ではありません。横置き状態で保存しないで下さい。

<冷凍保存についての注意> ●冷凍保存の際、食品が凍ると体積が増え、ガラスを押し拡げ力が働いて破損しやすくなります。以下の事に注意して正しくお使い下さい。

●液体の冷凍はしないで下さい。(例：味噌汁、コンソメスープ、だし汁、スープストック、牛乳、ジュースなど) ●ごはん、おかゆの冷凍はしないで下さい。(ごはんは水分を多く含み、凍ると予想以上に体積が増えます)

※但し、ごはんの場合は軽くにぎり、「おにぎり」状にしてガラスの側面と隙間ができるようにすると冷凍できます。

<食器洗い乾燥機についての注意>

●ガラス本體は食器洗い乾燥機で使えます。

Instructions for use

Failure to carefully follow safety instructions may result in personal injury such as burns. Be sure to observe safety instructions to keep the glassware safe and long-lasting.

<Instructions for handling the glassware>

● Before using the glassware, check edges for cracks, chips and other damage (to prevent injury when washing the glassware). ● Do not use any glassware that is cracked, chipped, or severely scratched, as it may break during use. ● The glassware is fragile. Be careful when you wash or use it.

△ Caution Wash the glassware with a soft sponge and mild detergent. Avoid using abrasive nylon scrubbers, steel wool pads, coarse cleansers and other abrasive products, as they may damage the glassware and cause it to break. ● Use dish bleach or the like to remove heavy stains. ● Do not wash the glassware by twisting it while firmly holding the edge.

The glassware may break and cause personal injury. ● Do not strike the glassware with or against a spoon or other hard object, as it may damage the glassware and cause it to break.

● Be careful when handling broken glass, as pieces may be extremely sharp. ● Instruct children on the proper handling of the glassware before allowing them to use it.

● When disposing of the glassware, avoid mixing it with recyclable glass bottles (because of differences in glass composition).

<Instructions for heating the glassware>

△ Caution: Do not heat the glassware with an open flame, as it may break the glassware or cause burns. ● The glassware is for microwave use only. It may break when used with other heating devices. ● Do not overheat the glassware or heat empty glassware. Be careful of hot glass. ● When heating the glassware in a convection microwave using the auto-cook function, make sure the oven does not use convection heating, as it may melt the lid. ● Remove the lid when heating the glassware if it contains oily food.

<Instructions for handling the lid>

△ Caution: Do not hold the lid when carrying the glassware, as the glass container will slip off. ● Note that coloring in food may cause stains on the lid and strong food smells may remain on it. ● The lid does not fully seal the glassware. Do not lay the glassware on its side.

<Instructions for frozen storage>

● Food expands when it freezes and may break the glassware. Observe the following instructions for proper use.

● Do not freeze liquids in the glassware. (For example, miso soup, consomme soup, broth, soup stock, milk, or juice) Instructions for frozen storage Do not freeze cooked rice or similar food in the glassware. (Cooked rice and similar food contains a lot of moisture and expands more than expected when it freezes.) * You can freeze cooked rice by making rice balls and placing the balls away from the sides of the glassware.

※ Note that the allowable temperature change is not the same as the heat-resistant temperature.

※ Heat-resistant glassware is designed to resist heat; it is not designed to resist impact.

<Instructions for washing the glassware in a dishwasher and dryer>

● The glassware is dishwasher and dryer safe.

Made in Thailand